



HOW TO READ YOUR NEPTUNE E-CODER METER

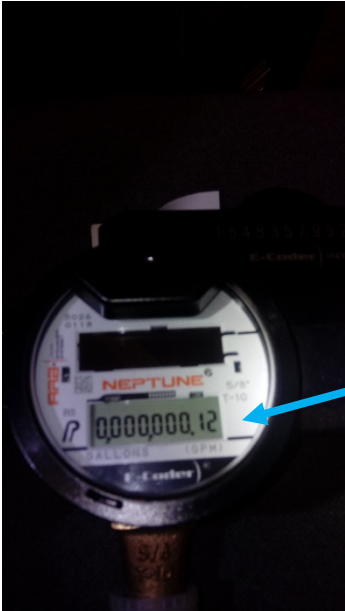

Once you have located your meter, you want to open the meter cap

You will then shine a light, your cell phone flashlight works, a few inches from the sensor

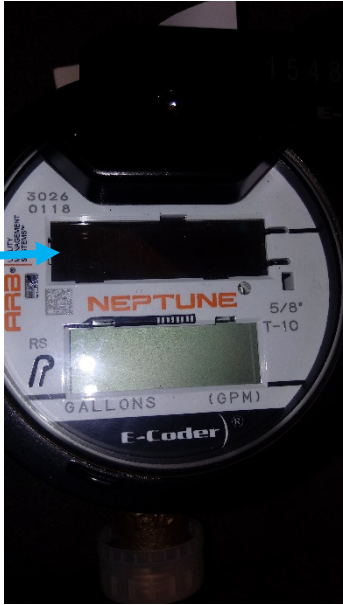

After a few seconds, the reading will appear